

Element	Interval	1000	6000	12000	18000	24000
	km	600	4000	7500	11000	14500
	miles	2	12	24	36	48
Air cleaner (i.e. air filter) element		--			R	
Exhaust pipe bolts and muffler bolts		T	--	T	--	T
Valve clearance		--	--	--	--	
Spark plugs		--		R		R
Fuel hose		--				
	Replace every 4 years					
Evaporative emission control system (CA model only)		--	--		--	
	Replace vapor hose every 4 years					
Engine oil		R	R	R	R	R
Engine oil filter		R	--	--	R	--
Throttle cable play						
Throttle valve synchronization			--		--	
PAIR (air supply) system		--	--		--	
Engine coolant	Replace every 2 years					
Radiator hose		--				
	Replace every 4 years					
Clutch		--				
Drive chain						
	Clean and lube every 600mi					
Brakes						
Brake fluid		--				
	Replace every 2 years					
Brake hose		--				
	Replace every 4 years					
Tires		--				
Steering			--		--	
Front forks		--	--		--	
Rear suspension		--	--		--	
Chassis bolts and nuts		T	T	T	T	T
I = inspect and clean, adjust, replace or lubricate as necessary						
R = replace						
T = tighten						
Blue text = link to "how to" guide to perform said maintenance task						
http://bolty.net	a blog about riding motorcycles					